

Fire




CW9000 Wireless Fire End User Guide



CONTENTS

Touch Screen Display	2
Panel Operation	3
Public Access Level 1	4
Evacuate (Access Level 2)	5
Silence Alarms	6
Mute Buzzer	7
Reset	7

TOUCH SCREEN DISPLAY

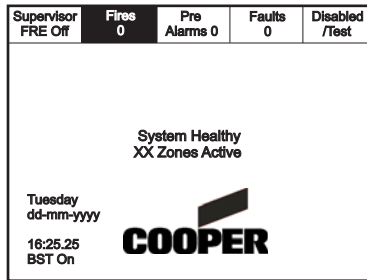

The Touch Screen is a multi-function display consisting 320x240 dots featuring high intensity backlighting. In normal operation, the display indicates as above with the backlighting off.

During an event on the system the display shows the FIRST EVENT and LAST EVENT plus other events as space allows.

The last 2 lines are normally used to display the total number of events, but they are also used for scrolling fire conditions, faults, pre alarms or disabled devices independently or for displaying a reduced menu when in fire condition. When an event occurs the Touch Screen backlighting comes on unless there is a mains power supply fault.

Use the Touch Screen to scroll through all active events on the system by using the SCROLL UP and SCROLL DOWN buttons (available at access level 1). You can display the contents of the log and also view details of any fires, faults, pre-alarms, faults or disablements.

Supervisor	Fires	Pre	Faults	Disabled
FRE Off	0	Alarms 0	0	/Test
System Healthy XX Zones Active				
Tuesday dd-mm-yyyy				
16:25.25 BST On				

Pressing a field will highlight it and forward to the next screen as shown below.

Touch the screen here to view details.

Supervisor	Fires	Pre	Faults	Disabled
FRE Off	1	Alarms 0	0	/Test
System Healthy 10 Zones Active				
Tuesday dd-mm-yyyy				
16:25.25 BST On				

Supervisor	Fires	Pre	Faults	Disabled
FRE Off	1	Alarms 0	0	/Test
First Fire	Meeting Room 1, Building 1, 1st floor Loop: 1, Zone: 2, Type: Optical (150)			
Total Fires= 1	<input type="button" value="Print All"/>		<input type="button" value="Help"/>	
Tuesday Dd-mmm-yyy 16:25.25 BST On				

PUBLIC ACCESS LEVEL 1

Public access level does not require an access code and allows anybody to review the functions outlined below.

Supervisor FRE off	Fires 0	Pre Alarms 0	Faults 5	Disabled / Test
System Healthy 10 Zones Active				
Tuesday dd-mm-yyyy 16:25:25 BST On				
COOPER				

Supervisor FRE off	Fires 1	Pre Alarms 0	Faults 0	Disabled / Test
First Fire 12:28:23 Device 1, Zone 1 Lp: 1, Ad:1, Z:1, Opto/thermal, [69]				
Total Fires= 1		Print All Help		
Tuesday dd-mm-yyyy 16:25:25 BST On				


Supervisor FRE off	Fires 0	Pre Alarms 6	Faults 0	Disabled / Test
Show Addresses		Show Zones		Show I/O
Print All		Help		
001 Device 2, Zone 1 Loop 1, Zone: 1, Type : Opto/thermal				
002 Device 3, Zone 1 Loop 1, Zone: 1, Type : Opto/thermal				
003 Device 4, Zone 1 Loop 1, Zone: 1, Type : Opto/thermal				
004 Device 5, Zone 1 Loop 1, Zone: 1, Type : Opto/thermal				

Supervisor FRE off	Fires 0	Pre Alarms 6	Faults 0	Disabled / Test
Print All		Help		
001 03-Jun-03 12:51 Warning! : Device1 Lp: 1, Ad: 1, Z: 1, Opto/thermal [69]				
002 03-Jun-03 12:51 Warning! : Device2 Lp: 1, Ad: 2, Z: 1, Opto/thermal [69]				
003 03-Jun-03 12:51 Warning! : Device3 Lp: 1, Ad: 3, Z: 1, Opto/thermal [69]				
004 03-Jun-03 12:51 Warning! : Device4 Lp: 1, Ad: 4, Z: 1, Opto/thermal [69]				
005 03-Jun-03 12:51 Warning! : Device5 Lp: 1, Ad: 5, Z: 1, Opto/thermal [69]				


Supervisor FRE off	Fires 0	Pre Alarms 6	Faults 5	Disabled / Test
Print All		Help		
001 12:31:59 Fault! : Device1 Lp: 1, Ad: 1, Z: 1, Opto/thermal [0]				
002 12:32:59 Fault! : Device2 Lp: 1, Ad: 2, Z: 1, Opto/thermal [69]				
003 12:33:59 Fault! : Device3 Lp: 1, Ad: 3, Z: 1, Opto/thermal [69]				
004 12:34:59 Fault! : Device4 Lp: 1, Ad: 4, Z: 1, Opto/thermal [69]				
005 12:35:59 Fault! : Device5 Lp: 1, Ad: 4, Z: 1, Opto/thermal [69]				

To activate the touch screen, touch the top left corner of the screen until the screen illuminates. Enter the supervisor mode by touching the supervisor button and enter the passcode (2214).

Select “Evacuate” button from the top menu.

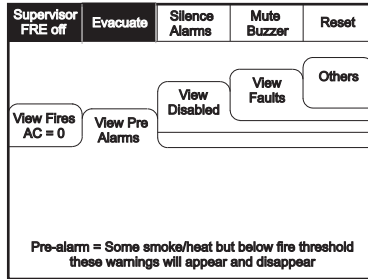

Select “Yes” to evacuate the building.

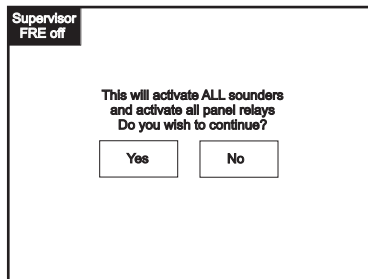 

To silence sounders after evacuation button pressed:


To activate the touch screen, touch the top left corner of the screen until the screen illuminates. Enter the supervisor mode by touching the supervisor button and enter the passcode (2214).

Select “Reset” button from the top menu.


SILENCE ALARMS

To activate the touch screen, touch the top left corner of the screen until the screen illuminates. Enter the supervisor mode by touching the supervisor button and enter the passcode (2214).

Select "Silence Alarms" button from the top menu.

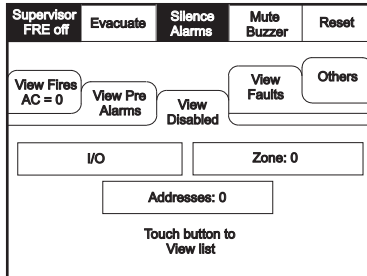


Select "yes" to silence Alarm.

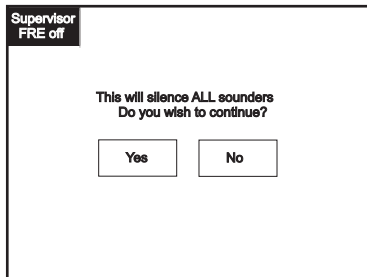

To activate the touch screen, touch the top left corner of the screen until the screen illuminates. Enter the supervisor mode by touching the supervisor button and enter the passcode (2214).

 Select "Mute Buzzer" button from the top menu.

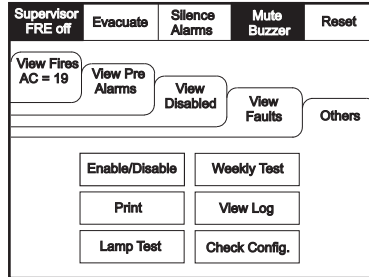


RESET

If already in Supervisor Mode Select "Reset" from the top Menu. Select "Yes" to reset the panel.

If not:

To activate the touch screen, touch the top left corner of the screen until the screen illuminates. Enter the supervisor mode by touching the supervisor button and enter the passcode (2214).

Select "Reset" button from the top menu.

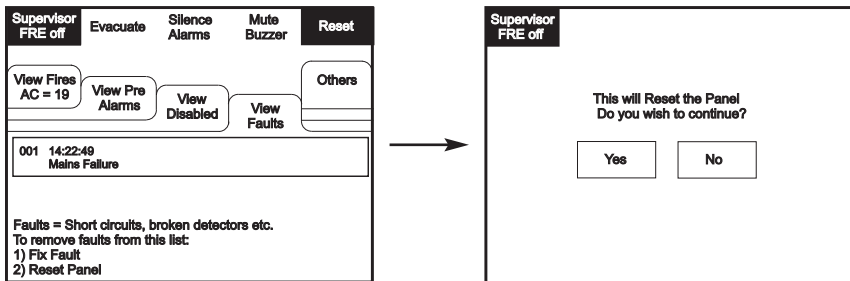

CW9000 Wireless Fire End User Guide
PR207-141-527-01
PINSTCW9000

Distribuidor Autorizado:
Tucano Comércio de Alarmes e Sistemas Eletrônicos Ltda
www.tucanobrasil.com.br
Fone/Fax: 41 - 3286-2867

