

DNH

Loudspeakers



CAPEEX-6Tx2

Ex-cabinet loudspeaker (A+B)



Product folder - en

1/4

v1.0 - 06.25

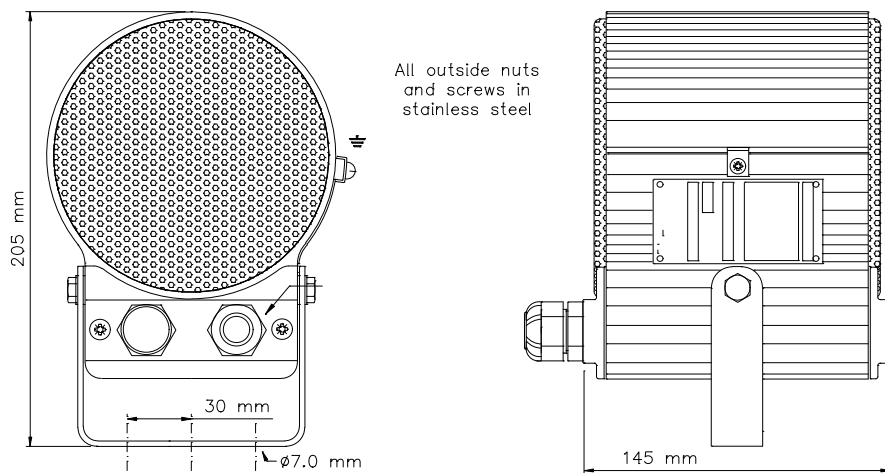


Fig. 1 - Technical drawing

100V TRANSFORMER tappings (standard)	
RED : YELLOW	3,0W
RED : GREEN	1,5W
RED : BLUE	0,75W

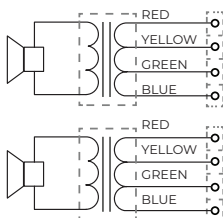


Fig. 2 - Circuit Diagram

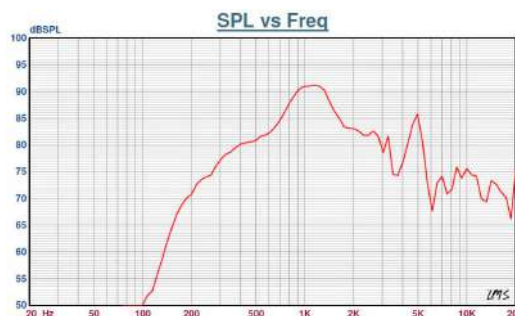


Fig. 3 - SPL at 1W/1m

TECHNICAL SPECIFICATIONS	
Material	Aluminium
Color	Anodized
Mounting	U-bracket
Cable entry (standard)	4xM20 blanking plugs
Termination (standard)	2xScrew terminal (e-chamber)
Weight	3,8 kg
IP-rating	54
Ambient Temp. Min/Max	-20°C / 40°C
Rated (standard) / max. power	3W / 2x3W
SPL 1W/1m	81 dB
SPL rated power	85 dB
Freq. range	150 - 20000 Hz
Effective freq. range	190 - 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	NA
Directivity factor, Q1kHz	NA
Options	Impedance, transformer, cable glands.



Copy of all certificates can be found by scanning QR-code or going to the DNH web page: www.dnh.no

APPROVALS AND CERTIFICATIONS	
Ex-marking	Ex II 2 G Ex d e IIB+H ₂ T6 Gb
IECEX	IECEX NEM 11.0016
ATEX	Nemko 10 ATEX 1054
Other certificates (variants*)	INMETRO, US/CAN, ECAS Ex
*contact the Sales team to ensure you get the right approvals	

DNH reserves the right to alter specifications without notice

INSTALLATION, OPERATION AND MAINTENANCE PROCEDURES:**WARNING: Do not open the Ex-loudspeaker when the speaker is energized.**

1. Enter the e-chamber by loosening the screws on the lid.
2. Use only appropriate ATEX certified 'Ex eb' cable glands/blind plugs reflecting the same specifications as the rest of the loudspeaker with respect to IP rating and environmental temperature.
3. Lead cable through cable gland and connect to the terminal according to required tapping.
4. For screw terminals, all terminal screws, used and unused, shall be tightened down to between:
BK – TUV 18 ATEX 8209U: 0,5Nm and 0,7Nm
MK – TUV 18 ATEX 8209U: 0,4Nm and 0,45Nm
5. If the Ex-loudspeaker is to be earthed use marked earth screw inside the termination chamber and/or on the outside of the loudspeaker housing.
6. Fasten lid screws with a torque of 2 – 2,2 Nm to ensure the IP rating.
7. To change the position of the loudspeaker, please adjust bracket (by loosening / tightening the bolts) as required.
8. To ensure IP X4 rating the loudspeaker must be installed with the surface of the sound openings in a vertical position.
9. Be sure that the Ex-loudspeakers (A+B) are connected to the same phase and correct voltage, frequency and power stated on labels on the model.
10. Be sure that the environmental temperature is within the certified temperature range.
11. Keep the loudspeaker clean of foreign elements, such as chemicals, soaps, acids etc.
12. Optional MF model (maintenance free) has moulded e-chamber and fitted with permanent cable. Constructed not to be opened.
13. Model variants are indicated on separate label. CAPEEX-6/T/x2/MF.
14. CAPEEX-6(T) is certified according to Directive 2014/34/EU and EN 60079-0:2012+A11:2013, EN 60079-1:2007, EN 60079-7:2007.
15. The loudspeaker is supplied with two years warranty against defective workmanship.



DNH reserves the right to alter specifications without notice

Product folder - en

3/4

v 1.0 - 06.25



Makes the world sound

Design, manufacture and quality by

DNH A/S Den Norske Høyttalerfabrikk A/S

Gruveveien 2-4
3770 Kragerø
Norway

Tel: +47 35 98 56 00
Mail: dnh@dnh.no
www.dnh.no

SUBSIDIARIES

DNH GmbH

Neumann-Reichardt-Str. 27-33
22041 Hamburg
Germany

Tel: +49 (0) 40 - 65 69 30-0
Mail: dnh@dnh.de
www.dnh.de

DNH WW Ltd.

31 Clarke Rd.
Mount Farm, Bletchley
Milton Keynes, MK1 1LG
England

Tel: +44 1908 275 000
Mail: dnh@dnh.co.uk
www.dnh.no

DNH Speakers Inc.

900 Calcon Hook Road, Bay 16
Sharon Hill
19079 PA
USA

Tel: +1 484-494-5790
Mail: dnh@dnhspeakers.com
www.dnh.no